# **jPSKmail** User guide

PSK mail

User manual updated Thursday August 31, 2011 Reflecting jPSKmail version 1.4.0

Copyright (c) 2010-2011 Pär Crusefalk and Rein Couperus Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.3 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

# Contents

Preface	6
A brief attempt at writing the history of the project	6
What is PSKmail?	7
So, what makes PSKmail special?	
In summary, what is pskmail?	
What about security in pskmail?	
Installation and getting started.	
Install procedure	
Optional aprs mapping client	
Installation Instructions for RXTX.	
Windows 98/NT/2000/XP:	
Linux:	
Others, manual procedure	
· 1	
Hardware selection	
Transceiver.	
Soundcard interface	
Antenna.	
Setting up Fldigi	
Carrier frequency (Hz)	
AFC range (Hz)	
Reset to Carrier and Report ARQ frames average S/N	
RS ID	
User Interface tour	
Preferences window	
User data	
Sending the link password to the server	
Beacon minute and server channel	20
Choosing the appropriate modes	
Setting the Mode table	21
Setting operating modes	
Email settings	
Configuration Terminal tab, connected operation (ARQ)	23
	24
Devices	
Modem	
Running fldigi and jPSKmail on separate PC's	
Main user interface, tabs	
Terminal tab, connected operation (ARQ)	
Terminal tab, chat mode (ARQ)	
Composing an email.	
Preparing an email	
PSKaprs emails	
Receiving email	
Mail headers tab	
Mail tab buttons	
Files tab (connected mode)	
APRS tab, Unconnected Operation	

Bulletin reception mode	46
Bottom part of the client	46
Status Line, Monitor mode	46
Status Indicators	
Modem tab	
Igate Tab	
Rig control tab	
Main menu	
File	
Mode	
Preferences	
Mbox	
Info commands	
Get Messages	
Get tidestations	
Get tide(###)	
Get Grib file	
Get IAC Fleetcodes	
Get IAC forecast	
Get WWV	
Get APRS stations	
Get VHF/UHF Relays	
Get camper sites	
Get Server freqs	
Get pskmail news	
Get web pages	
Identi.ca	
Link	
Help	
Mapping application	54
How to get weather information through PSKmail	
Getting IAC Fleetcode data	
Getting grib files	60
Appendix A, Mode selection	61
Mode tables for adaptive asymmetric link control	
APRS Mode choice	
Squelch Control	
Appendix B:	
PSKmail ARQ protocol specification (2nd draft)	
Introduction	
Radio interface	
Modem interface	
Link layer protocol	
Status diagram	
Protocol details.	
ARQ control and repeats	
Adaptive mode control	

Mode indicators for sending the Mode table to the server:	
Squelch Control	
Compression techniques	
Unproto (non-ARQ) operation	
RSID signalling	
References	

## Preface

## A brief attempt at writing the history of the project

The PSKmail project was started by Rein Couperus, PAOR early 2005. The baby steps were taken with a modification of gMFSK, the mode of choice was PSK63 and traffic was handled by the one and only server (PI4TUE) that existed. Soon another server joined the effort, SMORWO in Stockholm, and suddenly the project had "multiple" users (two) and had to evolve. For a time there was only the server in Stockholm and two clients (PAOR and SMORWO) and the project made necessary adjustments for the hf environment. Soon more servers started to appear, IS0GRB/Roberto, added a much needed server in the Mediterranean. Then more and more servers joined, such as WB5CON/Fred and DL9YCS/Jörg. The Intermar group then followed with several servers. At the start only email traffic was handled and, as stated earlier, only done so using PSK63. Soon more services were added, web browsing was one of those. One of the more important additions was APRS.

Traffic was handled nicely by PSK63 but yours truly, SM0RWO, felt the need for speed and noticed that the Fldigi project offered PSK125. Quickly Fldigi was integrated and PSK125 was the mode of choice for a long time. That urge for faster modes resulted in a move to PSK250 which is an excellent mode, it is of course faster and thus wider (abt 250 Hz). Wait a second, we almost always use 500 Hz filters in our rigs. Why not aim for a 500 Hz wide mode then? That mode was PSK500 and we moved there around summer of 2009.

Lengthy discussions within the group resulted in the consensus that it was time to break free from the chains of the old PSK31 keyboard to keyboard concept. PSK31 was indeed a fine idea but it had to make some sacrifices in order to reach its goal of being a suitable successor to rtty. Processing times could not be long, it had to deliver data pretty much in a similar way that the rtty operators were used to and one apparent problem was a lack of forward error control. A missing character here and there can mostly be handled by the human brain, not so by a computer with checksum control of received frames.

VK2ETA, John Douyere, made it his task to create the more robust modes where FEC and an interleaver net was added to the PSK modes, the new mode is designated as PSKRobust 500/250/125 and has been a real success. In fact PSK robust 500 has been the default EU mode ever since.

Mode profiles were added by Rein, these control the server speed and mode that can be adapted by the server. The server can move a connected session to a faster mode when the conditions are right and can of course select a more robust mode when the conditions deteriorate.

While writing this asymmetric linkup has been implemented. By that we refer to a connection that does not use the same mode and speed in both directions. For instance its now possible to have a weak client use a slow and robust mode while the server uses a very fast one. The mode scope now ranges from THOR8 to PSK500, using PSK, MFSK and THOR modes to cater for differing adverse conditions, including polar flutter, multipath, doppler and QRN.

## What is PSKmail?

PSK mail is a system that uses data modes to enable clients to access both the internet and to communicate with other psk mail clients. Data modes are used over a suitable radio, mostly it's a hf radio but higher frequencies are also in use.

Just saying internet access could mean that the system should support a whole range of services, and indeed it does just that:

- 1. Messaging
  - Handles the users regular email account, including gmail etc.
  - For emergencies its even possible to handle messaging off the internet (the whole internet could be down, messaging works anyway)
- 2. Web browsing, fetch and read any web page
- 3. Twitter, send and read tweets
- 4. File up and download
- 5. Supports APRS including position reports, messages and short emails.
- 6. Supports map clients like Xastir and Uiview

But, that's just part of what's there now. Servers can also fetch your weather report periodically, show you where the nearest camp site is and tell what other users are nearby and so on...

## So, what makes PSKmail special?

PSK mail is designed with the mobile/portable (maritime too) ham in mind. There is no big, power hungry and expensive modem to carry along. PSK mail is designed to use your pc soundcard as modem, right now the digital modem program Fldigi is what is being used for that very purpose.

A mobile/portable station is mostly not what we sometimes refer to as a "big gun", antennas and power output tend to be on the modest side. With that in mind PSK mail uses bandwidth efficient modes, hardly ever wider than 500 Hz (for higher frequencies that may of course be the case).

Wide data modes require a better signal to noise ratio than narrow ones, PSK mail is even able to adapt the speed and the mode so that the client can select a really narrow and efficient mode. Then again as the signal to noise ratio increases or the qrm goes away it will use wider and faster modes.

PSKmail network topology is flexible:

- 1. Clients can connect each other using ARQ, for chat of message transfer
- 2. Clients can connect to servers, which are gateways to the internet
- 3. Clients can send each other messages in unconnected mode
- 4. Clients can send APRS message and position beacons to the APRS backbone through the servers
- 5. Clients also contain a passive Igate, which can gateway messages and posits to APRS
- 6. Clients contain a telnet port where you can connect a map application like Xastir or Ulview

## In summary, what is pskmail?

The main characteristics of PSK mail can be summed up as:

- A semi duplex ARQ Chat client capable of transferring files
- A full fledged solution for HF APRS, including integration with the map clients
- An internet connection that can be used where there is no internet connection. Such as from a boat at sea or a cottage somewhere or on expedition or...
- Narrow, efficient, data modes are used. Thus enabling even the most modest setup.
- Servers on short wave provide long range connectivity
- No expensive and bulky modem, all you need is a PC, a transceiver and an antenna
- Available on multiple operating systems (Linux and Windows, MacOS and FreeBSD)

## What about security in pskmail?

Starting with jPSKmail-1.2, the link is protected with a password. If no password is set, the link is insecure. To use the POP3 mail agent on the pskmail server it must know where to get your mail. Unlike other HF mail systems, the pskmail server does not store your mail, it has to get it from the mailbox at your ISP. The server uses a database to store your POP data, viz. Pop server, userid and pop password. The database can be updated from the client, by sending a record to the server with the 'update server' command. To make sure only the server gets the data the client sends the record using a cooky. By setting a link password via the Preferences dialog you make sure somebody else using your callsign is unable to get your mail. You have to do this only once for every server (unless the database gets lost...).

**Data (mail, files, web pages) are NOT encrypted on the link**, but it is possible to send them compressed (zipped) to speed up transfers.

# Installation and getting started

To use PSKmail you need:

- 1. A ham radio license
- 2. An HF transceiver with a working antenna solution, for boats that may include an antenna tuner and an insulated backstay or a whip antenna.
- 3. A computer running Linux, Mac OS or Windows.
  - FreeBSD should also be fine but we lack test reports there.
- 4. An interface for connecting the computer soundcard to the hf transceiver
- 5. A narrow filter (500 Hz) in the transceiver is highly recommended. A bandpass dsp may also be very nice but is normally not a replacement for a real filter.

To install and use the jPSKmail client you will need:

- 1. A java runtime environment.
  - For Linux and MacOS you should be able to get that through your software distribution system (software update).
  - For all others, windows, its here: <u>http://java.com/en/download/manual.jsp</u>
- 2. A suitable modem, we use Fldigi for that now.
  - Fldigi can be found here: <u>http://www.w1hkj.com/Fldigi.html</u>

## Install procedure

The install procedure is in principle the same for all operating systems, there are subtle differences and they will be shown further below. But, the steps are:

- 1. Get and install Fldigi
- 2. Install jPSKmail
- 3. Make sure you have a java runtime environment
- 4. Launch the actual installer
- 5. Configure Fldigi and the jPSKmail client

## Optional aprs mapping client

APRS contains geographical information such as positions of boats, vehicles etc. Its very nice to see that information on top of a map, that is why an aprs mapping client can connect to jpskmail and use that as a local internet server. JPSKmail outputs APRS information to that client.

## Installation Instructions for RXTX

jPSKmail needs a JAVA Communication API to communicate with a GPS via the serial line (RS232 or USB), that library is the rxtx package. These steps are only necessary if you intend to actually use a GPS.

## Windows 98/NT/2000/XP:

For installing the RXTX package you will find the necessary dll and jar files within the directory where you installed jPSKmail.

Installation procedure:

- copy rxtxSerial.dll to %JAVA\_HOME%\bin, (%JAVA\_HOME% is the folder where JRE is installed on your system; e.g. c:\Program Files\Java\j2re1.4.1\_01)
- copy RXTXcomm.jar to %JAVA HOME%\lib\ext

## Linux:

If you are using Ubuntu you may very easily take care of that by installing "librxtx-java" using synaptic or from a terminal with "sudo apt-get install librxtx-java".

## Others, manual procedure

For others, linux other than ubuntu, the simple procedure that follows involves copying files from the folder where jPSKmail was installed.

Installation procedure:

- copy librxtxSerial.so to %JAVA\_HOME%/jre/lib/i386, (%JAVA\_HOME% is the folder where JRE is installed on your system; e.g. /usr/local/j2sdk1.4.1\_01)
- copy RXTXcomm.jar to %JAVA\_HOME%/jre/lib/ext

# Hardware selection

## Transceiver

There are many kinds of transceivers in use, many work really well with pskmail. Selecting a transceiver can be tricky and is of course guided by many factors. A few words of advice may be helpful for the beginner anyway.

A good transceiver should have an optimized digital mode, a mode where a narrow filter can be used for better reception. Adding a 500 Hz narrow filter is a very good way to enhance the S/N ratio on receive and may be the difference between a working and a non working connection.

Older transceivers may lack a dedicated digital mode and may require special handling in order to employ a narrow filter. One way around that is to use a split and listen in cw, with filter, and transmit in usb. That method may also require tweaking the rig BFO for cw. A memory for all of that is then useful.

A server that intends to use some kind of scanning will require a computer control connector, such as CI-V or CAT or whatever hamlib will support. Computer control is not necessary for a client at the moment but could be useful for handling the PTT.

# Soundcard interface

A soundcard interface is used to connect the computer to the transceiver. It may in theory be possible to connect straight lines between sound in/out and the microphone connector on the transceiver but that method has so many drawbacks that it is not recommended. A soundcard interface will provide isolation between the pc and the radio, it will normally be attached to the transceiver data connector and that helps keep the receive level correct. Its also much better to have the interface control the keying of the PTT instead of using a VOX. In all, please do consider using a soundcard interface.

## Antenna

This is a favourite subject among radio amateurs and I suppose whatever I write here will be subject to discussion :-). Anyway, an old truth may help: big antennas are good antennas and small antennas are only small. You are more than welcome to discuss antenna choice on the pskmail mailing list, many experienced hams should be ready to help.

For a sailing boat a classical antenna is to use an insulated backstay with a tuner mounted close to that wire.



*Illustration 1: SM0RWO portable setup, from left Yaesu FT-817ND, SB-2000 interface and EEE PC* 

## Setting up Fldigi

PSKMail needs a modem to work, that modem is Fldigi and setting it up properly is absolutely crucial. General Fldigi setup is best described by the help provided by the Fldigi project. But, there are a few things that need to be taken care of for pskmail.

The necessary settings can be found through the menu configure->modems, the tab *Mail* can be found through the *Misc->Pskmail* tab

## **Carrier frequency (Hz)**

Carrier frequency is the audio frequency you wish to use with your transceiver. Many use 1000 Hz here as that makes frequency calculation easy. For instance if the server uses the assigned frequency 10147 and you enter 1000 Hz then the dial should say 10146 (upper sideband). It is important that the carrier frequency is in the center of your narrow filter. E.g., if the center of your dsp filter in an IC756 is on 1500 Hz, set your carrier frequency to 1500 Hz.

## AFC range (Hz)

Its good to have the client and server stay on the same frequency, the modems will try to find each other by adjusting the frequency (AFC). That is why we limit how far away that AFC will be able to move the frequency. *AFC range* is the setting to take care of, a 50 Hz limit should be fine for wide modes. Narrow modes such as PSK 63 will require a more narrow setting, say 10 Hz.

## Reset to Carrier and Report ARQ frames average S/N

Reset to Carrier kicks in when there is no signal present and forces the audio frequency back to the set carrier frequency, it is recommended to enable that. Report ARQ frames MUST be set.

🗙 Fldigi configuration	- 5	⊐ ×
Operator UI Waterfall Modems Rig Audio ID Misc Callsign DB		
Sweet Spot Spotting Macros CPU Text Capture Pskmail		
Mail Server Attributes		
● 1000 ► Carrier frequency (Hz) ● Reset to Carrier		
1 20 🕨 Search range (Hz)		
Acquisition S/N (dB)		
◀ 40 ► AFC range (Hz)		
General		
☑ Report ARQ frames average S/N		
Restore defaults Save Close		<-

These settings are only valid when Fldigi is connected to the pskmail client. If Fldigi drifts away from the frequency and seems to ignore what you have entered here then perhaps the connection

between the client and the modem was not successful. The initialization will only take place when the client or server connects to the modem (Fldigi). This means you should **always start Fldigi prior to starting the pskmail client or server**.

Please ensure:

- •That Fldigi is started before the server or client is started.
- •If Fldigi is restarted for any reason, the server or client must also be restarted.

# RS ID

The next to take care of is RS ID settings, which is very simple. Just uncheck everything in the RS ID frame, illustration of that below:

🗙 Fldigi configuration	_ 🗆 ×
Operator UI Waterfall Modems Rig Audio	ID Misc Callsign DB
Video Preamble ID	
Transmit mode ID     Video ID m	odes
□ Transmit video text : CQ	▼ 500 Hz limit
Use small font Chars/Row: 1	Mode width limit
CW Postamble ID Speed (WPM):	
Transmit callsign	CW ID modes
Reed-Solomon ID (Rx)	Reed-Solomon ID (Tx)
Receive modes	Transmit modes
Detector searches entire passband	
Mark previous frequency and mode	
Reception disables detector	
Notifications only	
2 Squelch open (sec)	
Restore defaults Sa	ive Close <드

Illustration 2: RS ID settings

It is advantageous to disable RSID receive and transmit for modes which pskmail is not using, that makes sure fldigi does not switch to an invalid mode.

Also enable the XMLRPC port in fldigi, which is used for rig control and S/N reporting:

🗙 Fldigi configuration 📃 🗆 🗙
Operator UI Waterfall Modems Rig Audio ID Misc Callsign DB
Hardware PTT RigCAT Hamlib MemMap XML-RPC
Rig control via external program using xmlrpc remote calls. © Use XML-RPC program Initialize
Restore defaults Save Close <

When Fldigi works you can try to send some pings on one of the server frequencies, if your signal is decoded by a server then you will get a reply.

In some configurations Fldigi will not send the last character of a frame (<EOT>. When this is the case you can add some random characters to the frame in the Modem Tab of the Edit>Preferences screen. Once you get answers from a server the preparations are done.

You could ask another station on frequency to take a look at the transmitted signal, make sure it is not too wide. The TX audio should just touch the ALC. You are now ready to join the fun.

But, you will of course read through the rest of the manual first?

# User Interface tour

The jPSK mail application has an interface with some permanently visible parts and some that are grouped and accessible through tabs. Upon starting the application it will display the main window.

🛓 jPSKmail_0.8.9
File Mode Preferences Mbox Info Twitter Link Help
Connect CQ Pos. Send Abort
ISOGRB-3 Pskmail_server 1.0.34-9:43:01-IM197>
QRX, getting your info!
Solar flux 96 and mid-latitude A-index 2. The mid-latitude K-index at 0900 UTC on 01 March was 3 (23 nT).
-end-
Terminal Email Files APRS Modem Igate Rigctl
> <soh>DO!"~QUIT D81CDDs!s"\$\$9116<eot> OpdR rtdR o tne <us><soh>0!dB419<eot> &gt; C5a 3eea oa5a 3eeaaaTaTeiiiiii</eot></soh></us></eot></soh>
Listening
PSK500R SOGRB-3 ▼ 2÷ 10:45:49

The main tabs and their purpose are:

•**Terminal**, shows the error corrected exchange with other stations. Its not like the modem monitor further down in that only session text is displayed.

•Email, where you can send and receive emails.

•Files, where you can upload and download files to a server or to another client.

•APRS, the center of the APRS action including positions, messages, beacons etc. Many will have that tab page up whenever not connected to a server.

•Modem, shows S/N, mode and lots of modem statistics, also includes statistics on what servers can be used.

•Igate, shows all relevant information on what beacons have been relayed to the internet.

•Rigctl, allows access to the scanner and summoning functions.

The main user interface is divided into several sections, the sections have different main purpose and they are as follows:

	2				jp	skmail
Main menu	File Mod	le Prefe	erences	Mbox	Info	Twitter L
Buttons for important functions on the selected tab.	ZzWjy+Jp V/xVitwS ArzWvpV	+2B3yV 99f6dV Q7ljMAh IZWciTcł	KISE4AR KKNrWp HCX2fQ9	aWuWu vqvhxcj d4jYKZr SpMQB	nMIV8U3 gHI2EG	Pos SsL1 alFMr rED5dK/k 3Qgv1xeL ij5L6yucYj Vfdkg18N1
Tab area, contents depend upon selected tab	eaclzAAF -end- 2010-12	-04 22:0	wsjtx8A 95 dutch	KpXd6/l n_news.	EGAAA= gz rece	÷.
Grouping tabs	Termina	l Email	Files	APRS	Moder	m Igate
Modem monitor area,	SMORWO F > - <soh>(</soh>	6> <soh>0 Pskmail_ g-s ""#0 &gt;<soh>7-</soh></soh>	server	۲>		8 <s0h>7-</s0h>
Application status, outgoing text, Server selector etc.	>	MORW	0			
					s	/n 44 dB

But, before we go into detail about the main user interface we need to dive into configuring and setting up the client.

# **Preferences window**

## User data

The first thing to do is to set up your preferences. The preference window can be reached through the menu, choose the "preferences" item and then "edit"

Configuration	Devices	Modem	Rig	Mode
User data		Ema	il settings	
Callsign	PAOR			
Link to	SMORWO			
Minute	2			C
Latitude	52.83039	]	dd.mm	
Longitude	13.678742	]		
Pwd	*****			

#### The fields on the first tab page need editing, the fields are:

#### 1. Callsign

*Please use capitals for your call, and don't use additions like ZL/ or /M. SSID's (-2, -15) are allowed.* 

Your email settings are stored at the server using the callsign as key. If you wish to check several email accounts then you could tie them to an ssid each, I use no ssid for my primary email account and -2 for gmail. Just type in the first, update the server and repeat the procedure for the next account.

#### 2. Link to

Call of the server or client you want to connect, normally the one you can hear best.

There is a list of servers on the pskmail wiki, server operators are requested to keep that list up to date: <u>http://pskmail.wikispaces.com/PSKmailservers</u>

The server call can be changed with the server selector at the bottom of the page.

3. Minute

The minute the client beacons. The server has 1 minute time slots with a 5 minute period. The beacon minute runs from 0...4. It is used to make sure you don't tx on top of someone else. Also some servers are scanning several frequencies, and you can choose the channel this way.

#### 4. Latitude

In decimal degrees.... in case you do not use a gps unit. You may leave this field empty if you intend to use the devices tab to declare how a gps is connected. North is positive.

#### 5. Longitude

In decimal degrees.... in case you do not use a gps unit may leave this field empty if you intend to use the devices tab to declare how a gps is connected. East is positive.

6. Set link password

## Sending the link password to the server

Connect to the server. After sending your mail user record,

#### Write :SETPASSWORD <enter>

## Beacon minute and server channel

A server sysop may want to cover several frequencies, using only one transceiver. By switching between several bands its possible to have both local coverage on 80 meters and DX on higher bands (provided the antenna is capable of that). PSKMail uses a five minute continuous scan loop where servers can monitor one frequency per minute. The beacon minute setting in the client controls what minute to send aprs position beacons, a correct value there is then the minute that the server you want to link to listens to the frequency you are tuned to. The server scans during minute 0-4 and can use one default mode and frequency per minute. The scan loop goes on and on so minute 5 of the hour is minute 0 in the loop and so on.

Let's say that the server scans 80,40,30,20 and 17 meters. It listens during one minute on each frequency and all the servers update their scan table on the wiki, that way you can find what frequency and mode the server is on. So, if you would like to try 30 meters then the server in the example is there during minute 2. So, you should set minute 2 and the server name on the client and it will handle beacons etc. on the proper minute.

This means its important to sync your pc clock using ntp or manually. There are numerous ways about this, from GPS (GPS time is visible beneath the position on the aprs tab if you are connected to a GPS). At this time jPSKmail will not update the system time, the reason for that is that it requires different user privileges on different operating systems.

During a connected session, while the Monitor function is active, and also during reception of a Bulletin, scanning is halted and the client will remain on the channel.

#### Choosing the appropriate modes

Receiving conditions can be completely different at server and client. Often the server runs more power than the client, and the client's antenna is often too small, badly tuned and in the middle of an electro-magnetic field we usually call 'local QRM'. The latter is typical for camp sites with lots of RV's, or boats in a harbour. That is why PSKmail can use **asymmetric link control**, providing different modes for uplink and downlink. Link control for both up- and downlink is done by the server. Mode changing is established using RSID, a separate super robust MFSK signal telling the modem at the other end of the link which mode to listen in. Proper reception of RSID signalling is critical to efficient arq operation, and it is the lower limit of what can be achieved on a link. It is important to choose modes which are capable of connecting to the other end of the link. A good choice for the client mode is the default listening mode of the server (PSK500R or PSK250), or MFSK16. Once the connect has been established, the server will take over mode control, and will use the proper modes for up- and downlink channels. If you are not sure your frequency is exact, you can try THOR22, which is largely insensitive to small frequency offsets.

#### Setting the Mode table and the default mode

Starting with version 1.4.0, the client can set a custom mode table, which is sent to the server during the connect sequence. The mode table can be set using the Preferences->Modes dialogue:

Userd	ata		En	nail settings	
Configuration		Devices	Moder	m Rig	Modes
PSK500	Z	PSK500R	□ PSK250	PSK2	50R
PSK125	$\mathbf{V}$	PSK125R	C MFSK32	✓ THOR	22
MFSK16	V	THOR11		🗆 PSK6	3
defau	t	ок	Def. Mode	PSK500R	~
					3

By hitting the OK button you fix the mode table. You can make it permanent with Save Preferences. The 'default' button restores the default (EU) mode table.

#### Setting operating modes

First, set the server call mode. This is normally the default mode on the channel, used for beacons etc... When idle, and not monitoring, the client will switch back to the default mode automatically.

£	di Skr	##III#AUK0	1	1913 B
File Preferences	info: Link identi.ca	1Help		
Mail / APRS C Mail (scenning D Montor C) PSK63	1 60	Pes	Send	
C) PSK125 C) PSK250 C) PSK500 C) PSK1258 C) PSK2508 @ PSK5008				
C THORI THE C THORIL O THORIL O THORIL	95. Misdem y	jatu Rigeti		-
C) MFSK22 C) MFSK32 C) MFSK64 QSV (traffic)	-			÷
-		1965-00 E	(9107WC 🔍	2 9 23.55.01

#### Before connecting to a server or client, you can set the required client mode...

You can call a server in any available mode which is in the mode table, make sure TXID is set on fldigi.... As soon as the session is established, the other side will control your mode.

## Email settings

Configuration		Devices	3	Modem	Rig
User data	Email settings				
Pop host	popho	st@youris	sp		Ď
Pop user	myself				
Pop password	secret				
Reply to	myself	@myema	ail.com	N.	
	Update	e server	€ C	ompresse <mark>d C</mark>	DTA

#### Edit->Preferences->Mail options:

#### 1. Pop host

The name of your pop server, e.g. pop.myisp.com. If you intend to use a gmail account then enter pop.gmail.com here.

#### 2. Pop User

Your POP userid. For gmail it is your full account name (including @gmail.com or @your\_domain.com)

## 3. Pop Password

*Your POP password* 

#### 4. Return address

When someone wants to respond to your email then the reply will be sent to this address, if you want to receive the answer when away then use the address you can check. When sending emails an smtp server checks whether your return address is valid. This is also necessary for sending one-line emails via APRS. A server which does not have your return address may be unable to send your email. For gmail this is your full account name (including @gmail.com or @your\_domain.com).

It is now also possible to use a different return address for every mail, which is convenient when e.g. you are on a boat with several people

#### 5. Compressed OTA

Check this to enable compressed email handling and web page downloads over the air. Compressed means that emails and web pages are transferred as binary zipped files, this can speed up the transfer by a factor of 2x.

## Configuration Terminal tab, connected operation (ARQ)

Configuration		-	
comgaración	Devices	Modem	Rig
Log File (	client.log		
Max retries (	16		
Idle time	15		
TX delay		20	
Offset minute (	0 DCD	1 🤤	

#### Edit->Preferences->configuration -

- 1. Log file
- 2. Max retries

Maximum number of retries in TTY (chat) mode

3. Idle time

Max. time (seconds) the client waits for the end of a session when idle (in chat mode only)

4. TX delay

*Time delay in seconds before the TX starts sending. Normally 0.* 

#### 5. Beacon second

You can fine tune the time your beacon is sent by changing this value.

6. Offset minute Deprecated

#### 7. **DCD hang time**

The DCD hang time sets the sensitivity of the RX to noise on the channel. A value of 1..2 is adequate in most cases. A value of 0 effectively switches DCD off. If the value is too high, the delay can interfere with the ARQ timing of the system. If there is a lot of noise on the channel (random characters received) the client may not be able to send a status packet in time... During a connected session DCD is not active...!

## Devices

<u>\$</u>					_	×
Configuration	Devices	Modem	Rig			
User da	ita		Ema	il settin	gs	
GPS settings	onnected	🗌 Use (	jpsd			
Serial port				▼ Ge	et ports	
Speed	4	800		-		
APRS Server port						
	🖌 Enable	d Port nun	nber 80	63		
				ок	Can	cel

This tab controls external devices and connections. At the moment that means an external GPS and the internal APRS server for external mapping clients. The GPS is used for updated position beaconing and also GPS time is fetched and shown on the client. The internal APRS server is used from an aprs mapping client, for instance xastir. APRS data is fed to the mapping client so that geographical aprs information can be viewed on top of a map.

#### 1.GPS is connected

If the rxtx libs are installed then this checkbox can be used. Select it to have the client look for, and use, a gps.

#### 2.Use gpsd

Gpsd is a gps data server which is only available in Linux. It allows several programs to use the data of the gps unit. Uncheck this if you are running windows. jPSKmail uses the new gpsd protocol, so you must use gpsd version > 2.9.0.

#### **3.Serial port**

Where is the GPS connected? The client will attempt to fetch the systems serial ports and in the example above the client is running on linux. Other systems will refer to the ports by other names (such as COM1 etc.).

#### 4.Speed

Standard NMEA speed is usually 4800 bps but if other speeds are used then just select the correct one here.

#### **5.APRS Server port enabled**

*jPSKmail can act as your own internet APRS server. Just point an APRS mapping client to localhost, when jPSKmail and the mapping client are installed on the same computer that is.* 

#### 6. Port number

Connect the APRS client to localhost and the port noted here.

## Modem

User data	Er	nail settings	
Configuration	Devices	Modem	Rig
Modem settings			
IP Address	localhost		
IP Port	7322		
Frame preamble	8	1	
Frame postambl	e		

This tab controls the connection to the modem (Fldigi). In most cases they will coexist on the same computer but its perfectly fine to have them run on separate computers on a local area network.

#### 1.IP Address

Where is the modem, if on the same PC then enter *localhost* or *127.0.0.1*, if it is somewhere on the local area network (or on the internet) then enter the IP address of that PC. If you would like to run fldigi on one PC (in the shack for instance) and jPSKmail on another (in the garden perhaps) then have a look at the next section of the manual where that is described (next page).

#### 2.IP Port

This is the port that the modem (Fldigi) uses and the one the client will try to connect to. Standard now is port number 7322.

#### 3.Frame preamble

Some setups have reported trouble with incomplete frames being transmitted. If the start of the frame is missing then its possible to add extra characters to transmit before the start of the frame. In most cases this will be empty.

#### 4.Frame postamble

Works kind of like preamble, only after the frame. The characters in this field will be sent after the frame.

## Running fldigi and jPSKmail on separate PC's

You cannot be in the shack all the time... I wanted to use jpskmail from the garden table, without moving the K3 and the antennas... Fortunately jpskmail allows you to connect to a remote instance of fldigi. To do this do the following:

- Start fldigi with: 'fldigi --arq-server-address xx.xx.xx, where xx.xx.xx is the ip address of the machine it runs on
- Go to jpskmail edit->preferences->modem and fill in the host name xx.xx.xx.xx

- Hit the OK button...
- Restart jpskmail

jpskmail will now connect to the remote instance of fldigi. in my case it is running on an eeePC 701.

When I minimize fldigi the machine only needs a few Watts, and I combine it with a file server function...

I can now operate jpskmail anywhere around the house as long as I am within range of the wifi access point.

# Main user interface, tabs

## Terminal tab, connected operation (ARQ)

🛓 jPSKmail_0.8.9				_ □ ×
File Mode Preferenc	es Mbox Info Twitt	er Link Help		
QUIT	CQ Pos.	Send	Abort	
Solar flux 96 and mi The mid-latitude K-i			3 nT).	
-end-				
ISOGRB-3 Pskmail_ser	ver 1.0.34-14:22:38-	IM199>		=
Receiving email 2011-03-01 15:24 Mai Mail sent on server.				
Terminal Email	Files APRS Moden	n Igate Rigctl		<b></b>
<pre><soh>□B"s###8244&lt; aR GO0tJR <us><soh>7"s###E7" &gt;</soh></us></soh></pre>				<u></u>
<soh>□0"\$~QUIT CD3A□□\"s\$##FDF6<e C5afaeea</e </soh>	OT>			=
Discon				
		PSK500R	ISOGRB-3	▼ 2÷ 15:24:30

With the terminal tab you can start a connected session with the server.

PI4TUE	~	1	:	17:18:49	
		_			·

1. Choose the server call on the server drop-down list (you can make this one permanent by hitting SAVE in the preferences dialog).

1000					1.752
-	-	-	-	-	ct
1000	-				

- 1. Hit the Connect Button or goto Files->Connections->Connect
- 2. Wait until server acks and starts the session. The Connect Status will change from "Listening" to "SERVERCALL", and the small coloured indicator on the bottom right will turn green... PSK mail uses a 3-way handshake for connect, you know for sure the connect was successful when you receive the 'greeting message' from the server.

- 3. You can now issue any command the server will recognize. The most important functions can be reached with a button or via the menu.
- 4. To end the session hit the QUIT button (same as Connect).
- 5. If the server does not receive this command, you can abort the session by hitting the Abort button. It is courteous to wait for the QUIT to disconnect, in that case the server will not send polls until it times out...

#### Abort

With the abort button you can close a


connection one-sided. The client sends an abort frame to the server. If the server does not notice that, it will continue polling until it times out. It is not regarded very courteous to do this.



With the Pos. button you can manually send an APRS Posit packet. Any server receiving it will send a QSL packet. You do not have to be connected for this.

## Terminal tab, chat mode (ARQ)

To use the chat (client to client) mode, just put the callsign of the station you want to call into the server selector and hit the connect button. Since jPSKmail 0.8.5 automatic mode control is implemented.

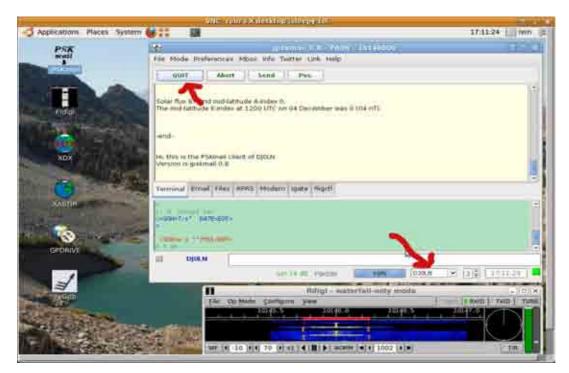

For File upload go to the Files Tab, and hit the Upload button. After choosing a file to upload, the client will ask you what the addressee for the file is. jPSKmail is being prepared for Delay Tolerant Networking in future...

pplications Places Sy		17.25:06 iii rein
PSK	jpskmail 0.8 - PAOR - 1014	6000 (_)a)
	File Mode Preferences Mbox Info Twitter Link Help	
areas and	Connect Abort Read Update Download	Upload List
1000	P#PVPn7cf3349Aps0zD1Epg1u20KKxA6h0NxH2757k7p1ruw6/XHd32cHkbLd 4D1602u10Rtjt/Cki0cwx26hdt/+0p0XeHndz5VL06EvN37Few14t0FnyTAFb	five?thexxkz?SCF
	Feel/Groways 2nd and Constant and the second and th	/#d010_fv+dxp473e VOPsVHVZ
fidigi	e5aH	BOYdNOYN BZSYBG/H
ALC: NOT THE OWNER	diter interview Dentative Life	§51204069
- COM	d4skt /home/reir/DL V	Artig Ak ROM Ar Shighting 2
XDX	anon Folders Eles	WtEtek.4w Vet38C7/EL
OMO	vient d ivyfe J	GZUTX1H4
and the second second	METAREA_1_HIGH_SEAS_1	
	Tam METAPEA I OFF SHOPE I	PC III
XASTIRO	arctic_AMSRE_nic_lowqua	ant
	# batcelona-we	
	and a second sec	A) -
🔺 😵	Selection: home/rein/DL	179 11100 10 10 10
GPORIVE	PidTLE_mfo	
	E Filter	
1	[All Files	1 [DJOLN ] [2] Q   (17,25-00
3	Cancel 4	Box de
(AVGrib	Conto 1	
	10145.5	10146.5
A DESCRIPTION OF THE OWNER	NORADO SALAR	
「日本」の「「日本」		

## Composing an email

There are two basic ways to create and transmit emails from jPSKmail:

- •Proper emails with custom subject and possibly an attachment
- •Very short emails, called pskaprs emails, with fixed subject and no attachment

## **Preparing an email**

The email editor can be reached with the *New* button on the **Email** tab. The email editor is rather simple, there are fields for address, subject and message content.

Applications Places System		rein catelination (http://www.uk	Q.	13:48:38   (ein
PSK waii	HAS	jpiškmali 0.8 - PAG ces Mbox info Twitter unik Help		1.1018
Subject: to	Add attas sr@domai Haisdia ge Haisdia g	Anometrein	ter	522 1522 10547 (20) 13:40 1740 105 (20) 740 (70)

#### •To

Enter the addressee email address here. Multiple recipients can be entered, its important to then separate them with a comma like: "user1@domain.com, user2@domain.com"

#### •Subject

This way of creating an email allows entering a subject, keeping it somewhat short is good

#### •Message body

The message text, the actual content of the message

#### •Add attachment

If you wish to add an attachment then browse for it after clicking this button. The attachment will be compressed and packed into the message so please bear in mind that it needs to be small. I would not add attachments bigger than a few kb.

#### **PSKaprs emails**

This is a way to transmit a short text with a fixed subject to one email address. Its done in unconnected mode and a server that receives it will transmit an acknowledge packet.

		2
Listong	user@domain.com Will anchor as	blanned, all is well. 73+
		SM0RWO 0 20:54:25


This email is sent in unconnected mode so keeping the text short helps it get through to a server. Actually, the APRS system limits messages to 167 characters.

## **Receiving email**

Received emails are added to a file called 'Inbox'. This file is in mbox format, so you can use it as a spool file for mail clients like Sylpheed or Thunderbird. That way the mail you receive via PSK mail can be integrated with your regular mail.

To read your mail using jPSKmail,

- **Connect** to the server
- Go to the email tab
- Hit the QTC button, your headers will be added to the list.
- When you want to download a mail, **double click on the header**, it will be added to the Inbox. Right clicking on the header will give you a short menu (Get or open).
- When you want to read a mail, go to the Inbox tab and double click on the header. Again

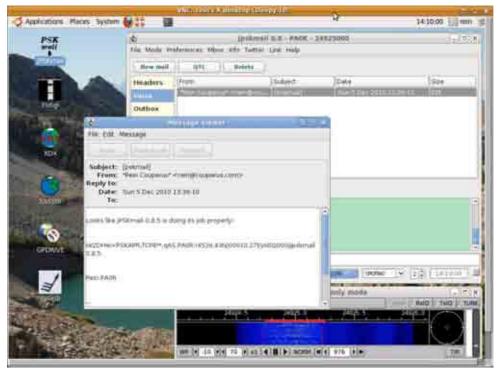

right-clicking will give you a small menu.

## Mail headers tab

This tab will display the message list fetched from your email account while connected to a pskmail server. You can choose a mail for download by double clicking on the header. One mail at the time.

🥌 jPSKmail_0. File Mode P		s Mbox In	fo Twitter I	Link Help	-	_	_ C	×
New mail		ξтс	Send	Dele	te	]		
Headers Inbox Outbox	No 170 171 172 173 174 175 176 177 178 179 180 181 182	Rein Couper	is fa ;r?= Crusefa mm Ili ;r?= Crusefa ;RB ned Score Subr	nission	[pskm Re: [H [pskm [RRDX [pskm [pskm Re: Us [RRDX Re: [d	Subject aterface translation ail] twitter is here again amlib-developer] libtool chan ail] Re: twitter is here again A] Frage zu K3 und N1MM ail] Re: twitter is here again ail] Re: twitter is here again el Stafford is now following you ail] Re: twitter is here again er interface translation A] CR3L CQ160m-SSB Multi igitalradio] Re: PSKMAIL twitter N,35N,5E,5W	3276 744 863 1090 10031 2128 71379 1026	
<ul> <li><us> <soh> &lt;</soh></us></li> <li><eot></eot></li> <li>&gt;ieeiA \$Y /dt0</li> <li>nrlnv ttx e0E Y0</li> <li>"x_p+qEfhceue</li> <li>.st5 eUpo9c2 on</li> </ul>	EOT > eappjtenp; oithwi~oht	aEc jEoep eht :n sitLel!o iui: c s\$tccgea /	:1 mge ztnon!z ceR 4v LQ e el *iesacu d #tt zegoid,yyi pGr	:i ;tat Jan Ir ne met!Fpz +ckerWnlei nMP %e1eP	or!+A_ 2{o lrt n	si c"n unwtct+tnpnn(rVtQomtqAe eovZ=s:wscgmitkiad/thatr'Vzc n 5Cl seweheau olegidtetLiOpv onwheitticbthdicz3mdlenfooa	) vfOA_ea	
ngm00hmvSC		u =. n}r− gei		<500R [		ISOGRB-3 💌 2	15:36:26	

## Mail tab buttons

	New mail	
The New button starts a dialog which all small attachment (~6k)	lows composition o	f a new email. It is possible to add a



The QTC button requests the new mail headers from your email account. It first reads the headers file to see what the last header is that was downloaded. It will request only the new headers. You can override that behaviour by either cleaning the headers file (File->Clear->headers), or send ' $\sim$ QTC +0' To the server.

Mail download is done by right-clicking on the header...

As soon as the download starts the progress bar will start indicating:

	30%	
--	-----	--

The progress bar goes to zero as soon as it reaches 100%. In monitor or Listening modes the progress bar shows received signal quality...

The Send button starts the upload of the first email in the Outbox. As soon as "message sent..." has been received from the server the email will be deleted from the Outbox. It is still available in the 'Sent' file.



With the Delete button you can delete mails from your mailbox at the ISP. Enter the numbers of the mails to be deleted in the input field. You can enter more than 1 number, separated by spaces. The server will answer with "Mails x x deleted..." in case of success.

The numbers reflect the numbering in your ISP mailbox. After a delete mail operation you should clear your headers list and rebuild it so the list reflects the numbers in the ISP mailbox.

# Files tab (connected mode)

2				jpski	nail 0.	I - RA	OR - I	0147	000						
File Mode	e Edit	Mbox	Info T	witter Lir	<b>ik</b> Map	Help									
QUIT		Abort		Read	Upda	te	Down	load	Upl	oad		List			
Terminal	Email	Files	APRS	Modem	Rigct	Igate									
>FATTIIID30 BDA6 <soh: &gt; <soh>Z -<us><sof &gt; SOH&gt;V</sof </us></soh></soh: 	•6?s\$##  's#\$\$AA   >6?s\$#	F513 <e E8<edt #F513&lt;</edt </e 	OT> EOT>												< m >
	PI4TUE	[													)
					PS	K500R	1	100%	6	PI4T	UE	~	20	15:1	8:49

To download a single file from the server, first enter the file name into the input field, or **double click a file name in the 'files list'**, and push the **download** button.

2				jpski	mail (	):81 - IR <i>I</i>	OR - II	14700	00						
File Mode	Prefe	rences	Mbox	c Info Tw	/itter L	_ink He	elp								
Quir puremada danish_se dutch_new dutch_wx fleetcode freqs.txt PI4TUE_in pings_log stdmessag uk_shippi ww.txt 2	a_areas vs 2010-1 2010-1 s 2010- 2010-1 fo 2010 2010-1 es 2010 ng 2010	2010 12-05 12-05 12-05 12-01 12-05 12-05 12-05 12-05 0-12-0 0-12-0	one:gr -12-05 16:23 6:23 24 15:00 09:50 1 1 09:50 16:56 4 5 16:23 5 16:23	16:23 33 1629 449 2624 444 2 239 494 3 258 3 3629	-01 09	date : 30 - 300	Down	oad	Uplo	ad	U	st			
Terminal					Igate	Rigctl	1								×
-end- FDCO <soh: &gt; - <soh>1</soh></soh: 							Ł								< III >
<b>–</b> 1	PI4TUE	[													
done					F	PSK500R				PI4TUE	~	20	17:	01:47	į =

File download is binary, compressed with gzip and base64 coded. The client decodes and unzips it and puts it into the Downloads directory.

After download the file can be READ, or UPDATED. There is a file chooser dialog to make that easy.

UE_info
UE_info
UE_info
ic_AMSRE_nic_lowquali
the second se
elona-wx
nradarnl-ani120phone. etins /.sh h_news

## APRS tab, Unconnected Operation

년 File Edit Mode	Mbox Info Twitter			
Terminal Mail hea Position	51.3742	IP .	settings y v Beacon Period: 10 v Autolink Pi4TUE 16:42 PAOR: test{01	
Speed Fix taken		Status	test	
CUS> <soh>QSL PA TX* <soh>00uP CUS&gt;<soh>00uPI4 CUS&gt;<soh>SL PA0</soh></soh></soh></soh>	AOR:26 PAOR test (0 OR de PI4TUE 55F <e AOR:26 PAOR test (0 TUE:26 PAOR&gt;PSKAPR R de SMORWFOCE<eot< td=""><td>OT&gt; 2FDE5<eot> R*::PAOR</eot></td><td>:test(017E92<eot></eot></td><td></td></eot<></e 	OT> 2FDE5 <eot> R*::PAOR</eot>	:test(017E92 <eot></eot>	
Cheffermory's	PAOR test		PI4TUE v 1 : 16:42:39	

Unconnected operation (like UI frames in packet radio) is done from the APRS screen.

From this screen you can organize position beacons, send aprs messages to other pskmail stations, to VHF units, or to the internet (Uiview, Xastir), or send APRS short emails to any email address.

You do this via a PSK mail server which is a gateway to the internet. Servers are interconnected through the APRS Internet backbone (APRS-IS).

You can set the server you want to use on the servers drop list, at the bottom line of the screen.

On program start the server is loaded from the configuration file. Your pskmail client will automatically add more servers to the drop down list as QSL's of beacons and messages are received.

*To be able to receive messages via a server it is necessary to be in its link table*. The server link table makes sure messages are sent by only one server at the time. To get an entry into the link table you can manually send a **link request** (ctrl-l) to the server. The server will acknowledge the request and enter your call into its link table. This can also be done automatically. The client checks if the last link equals the preferred server and will send a new link request if necessary. Auto-linking can be switched off on the APRS tab.

On the APRS tab you can set the aprs beacon icon, the beacon period and the status message. Beacon minute (0...4) can be set on the bottom of the screen, the beacon second on the *Preferences->Edit->configuration* tab.

It Is common practice to set the aprs beacon period to 30 minutes or 60 minutes for non-moving objects.

To send a position beacon manually you can use ctrl-b or the Pos button on the Terminal tab.

To send an APRS text message just enter "CALLSIGN Texttexttext" into the text input field at the bottom of the screen. Use upper case for the callsign. If the callsign is known at a VHF aprs digipeater it will be delivered to VHF.

To send a short email enter "email@addres.xxx Texttexttext" into the text input field.

# **Bulletin reception mode**

Whenever the client receives a bulletin (anything starting with 'ZCZC' and ending with 'NNNN'), it will go into bulletin mode. Several things happen in Bulletin mode:

- Frequency scanning is stopped during reception of the bulletin
- The received text will be appended to the file ~/.pskmail/Downloads/bulletins.

# Bottom part of the client

*TX* <soh>00u</soh>	SMORWO-7> <smorwo ed06<eot=""></smorwo>
Listening	per@crusefalk.se Hi myself :-)
-	SM0RWO 0 22:06:43

## Status Line, Monitor mode

The status line shows what the client is doing, 'Listening' most of the time.

When you click the Status Line it will switch to **Monitor Mode**. In Monitor mode incoming packets are shown with a time stamp, and if available the **session partners**...

Monitor mode stops automatically as soon as a connected session is established, or when a Bulletin is received. Also, **Monitor Mode stops halts the frequency scanning**, so you are effectively monitoring a **single channel**...

## Status Indicators

There are 2 status indicators, the channel indicator and the link status indicator. The left hand one is the **channel indicator**. Colours mean:

- Grey Idle, no data
- Yellow Data, not valid
- Blue Data block in progress
- Red Transmitting data

The right hand indicator shows **link status.** The colours mean:

• <mark>Green</mark> :	no errors on the link
• <mark>Yellow</mark> :	rx error
•Blue:	tx error
• <mark>Red</mark> :	rx + tx errors
• <mark>Ked</mark> :	rx + tx errors

There is a slight delay, because the client does not know the link status until it receives it from the server. i.e. most of the time the link indicator is 1 frame behind...

# Modem tab

This tab shows some interesting facts about the current modem status. For instance it shows both the receive and transmit data mode, this can differ during a connected session thanks to the asymmetric linkup capability. S/N-value get fed back immediately and this is can/will also used to rank heard servers. Rx CPM shows the receive speed (Characters Per Minute).

The maximum possible speed has been measured as 1862 characters/minute (PSK500-PSK500).

2		jps	kmail 0.8 - P	AOR - 101	47000	)1				ie) Io (X)
File Mode	Preferences I	Mbox Info Th	witter Link He	lp						
CARQ Stat	tistics			Server st	atistics					]
				Server	S/Q	Bcns	Last	Mode	dB	
Rx	PSK500R	Av. Qual,	100%	DJOLN PI4TUE	0 100	0 36	12:04	0 PSK500R	28	
T×	PSK500R	Blocks		SMORWO ISOGRB-3	100 42	6 6	12:01 12:02	PSK500R PSK500R	20 25	
Mode	Asymmetric	Bl. Size		DA5UWG	0	0		0		
Rx CPS	14	Total	72							
🗐 Alt	s/n 19 dB	(CPM)	72							
' Terminal	Email Files A	PRS Modern	Igate Rigctl							
ni LWTEmingt nPritplinoGg e Acceenonge e5pOts hiveoyl (uieNtgetanco Lo g kTne-US>ti v an tantelinki 5xtVghp tureOdesotitlij vi u Ohrasz eeSc gp asrfntgpnin: U tgftgeGPSNe vin diz uieNoneoeicoGeeF gr uiestMhinN-US>c g onlieet vmlaPi(ee auuf <soh>OOuPAOR:6 -S6J%4S y jpskmail 0.8.5 0964<eot> K2ZF :12Ric oxR oOGKOt-US&gt;<soh>QSL PAOR de SMORWO FOCE<eot> &gt;<eot> &gt;seeeproe TaTapaQ TaaTFeesI: eaiPl</eot></eot></soh></eot></soh>										
<b>II</b> , 4.0	training									1
		s/r	19 dB PSK500	R 🛄	100%	S	MORWO	♥ 2≎	12:2	7:33

## Igate Tab

2	jpskmail 0:8 - PAOR - 24925000	
File Mode Preference	es Mbox Info Twitter Link Help	
Igate 🗹 ON		
Igate call PAOR	IW2DHW>PSKAPR,TCPIP*:!4539.43N/00910.27Ey000/000/jpskmail 0.8.5	
Terminal Email Files	APRS Modern Igate Rigct	
Efgqehe tta <soh>OC <us><soh><eot> &gt;<eot> &gt;dsalTaTaaTaTaTaTaaT</eot></eot></soh></us></soh>	maPlh boiMuitar "eZodOz e2 dn a R Sti a KGc mx Mm[6139]nf d.e l Bika-)'iro- MPAORi6 MS63%45/ y jpskmail 0.8.5 D731 <eot≻ "aTFiooqeeuxlenhaaez/ n sge 5eP "aanoee (oxEOy9 G/Ina ae0 gag h +tt</eot≻ 	
	PDOu e ieotteOReOeNetOrg in& inre oiNt jpskmail 0.piinrirTaTpTaTaT v schol pno R ni enoti n ipwietc ein:: nriG wi oh iiig inriiNtixc n ig	18(
I. Listening		
	PSK500R 100% SMORWO 2 2 13:35	:02

The Igate can be activated on the Igate tab. When it is on, it will connect to a APRS Tier2 server. All beacons and messages received by the Igate will be sent to the APRS-IS backbone.

# **Rig control tab**

Rig control can be switched on via the **Preferences->Edit->Rig** options dialog.

User	data	Email settings					
Configui	ration	Devices Modem Rig					
🗹 Use rigctl			🗹 scan				
Status: ON			Offset (Hz)	1000			
Channels							
0	1	2	з	4			
10147000	10147000	10147000	10147000	10147000			

The scanning function can be switched on separately. You can also enter the default frequencies for the scanner. These should be entered as the center frequencies of the channel, as the scanner will use the Offset to calculate the VFO dial frequency. It is possible to store the frequency tables of known servers in the ~/.pskmail directory. The files are called SERVERCALL.chn, and contain a comma-separated list of frequencies (in Hz). Example for **PI4TUE.chn**:

29250000, 10147000, 10147000, 10147000, 18106000

실 jpskmail 0.9.3 - PAOR - 10147000	_ 🗆 ×
File Mode Preferences Info Identi.ca Link Help	
-Server summoning	
Rx Current 10147000 + Set ac	tive
SM0RWO 10147000 - Summon	
Frequencies to scan	
✓ Scan 10147000 10147000 10147000 1014700	00 10147000
Terminal Email Files APRS Modem Igate Rigctl	
<soh>DOOUPAOR&gt; <smorwo <eot="" ee92=""></smorwo></soh>	
Listening	
PSK500R	SMORWO 💌 💶 16:22:52

Whenever CAT control is activated on Fldigi, the transceiver can be controlled from the rigctl tab.

SERVERCALL will follow the server.frequency table

The Set button will put this into Rx Current, which is the CAT frequency in fldigi.

Rx Current can be incremented and decremented with the '+' and '-' buttons. The transceiver will follow.

#### The **SUMMON** button is special:

If the **RX Current** and *SERVERCALL* frequencies are different, the summon button will:

- Issue a Connect Request on the SERVERCALL frequency
- Listen for the acknowledge on the RX Current frequency.

#### This tells the server to come to your RX Current frequency to handle the traffic.

Of course this only works if the server is configured to support summoning...

## Main menu

File Mode Preferences Mbox Info Twitter Link Help

The main menu is divided into these main sections:

### •File

General operations like connecting to a server or client, clearing lists and closing the app.

### •Mode

Controls the main mode of the client and the modem mode including mode profiles for adaptive speed during connected sessions

### •Preferences

The way to edit or save the preferences dialog

### •Mbox

The way to handle **local messages** on a server during connected session. This menu item is only visible if there is local mail waiting at the server.

### •Info

Commands to send to a server during a connected session See a detailed breakdown of Info further below.

### •Identi.ca

Send and get status updates on Identi.ca

### •Link

Here is where we handle the link to servers

### •Map

Not currently used. An integrated map that displays aprs data has been evaluated and an even better one will be worked on later.

### •Help

Opens the interactive help which will be created from this manual and also displays license information about the application.

## File

Handles general operations like connecting, clearing lists and closing the application.

🛓 jPSKmail_(	).8.9	_		
File Mode	Preferences	Mbox	Info	Twitter
Connection	1 I	•	Conne	ct
Clear		Þ	Abort	
Pending Tr	ansactions	l	-6-11-	n
Accept part	tial docs		efalk Iperus	
Reject part	ial docs		ostafa	
Delete part	ial docs		· ·	Crusefa
Quit		Ctrl-Q	Kromm pinelli	
	177 1	G6CKR Fwitter =??Q?P8	,	Crusefa

•Connection

•Clear Inbox, or Outbox

•Clear headers

•Clear bulletins

•Show pending transactions

•Set file up/download resume policy

## Mode

Controls the main mode of the client and the modem mode including mode profiles for adaptive speed during connected sessions. For a description see Appendix A

## Preferences

The way to find the preferences dialog

## Mbox

The way to handle local messages on a server during a connected session By local messages we mean messages addressed to <u>user@server</u>. These messages are stored locally only, not forwarded to other PSKmail servers (now). The Mbox menu is only available when there are messages pending at the server. You can send mails addressed to a server by using the

CALL @ SERVERCALL mail address.

## Info commands

### **Get Messages**

Fetch APRS messages for user stored at findu.com

## Get tidestations

Get list of tidestations close to current position

### Get tide(###)

Get tide data for tide station ###, use get tidestations to get number of the wanted tide station.



## Get Grib file

Here the client will send an email to query@saildocs.com requesting grib data, centered on your position +- 5 degrees. The server needs to know your return email address (send your mail record to the server if that has not been done). The grib file is delivered to your mailbox in the cloud. Download it and view the file with 'ZyGrib''.

## **Get IAC Fleetcodes**

This will query NOAA and fetch the IAC fleetcodes that produce a current pressure map for the north Atlantic. A file will be downloaded to the client and placed within ~/.pskmail/Downloads

You can view the file with zyGrib..

## **Get IAC forecast**

This will query NOAA and fetch the IAC fleetcodes that produce a 24 hour forecast pressure map for the north Atlantic. A file will be downloaded to the client and placed within ~/.pskmail/Downloads. ZyGrib is a good choice for viewing these files.

## Get WWV

Get latest Geophysical Alert Message wwv.txt from NOAA.

## **Get APRS stations**

Get a list of nearby APRS stations, uses clients reported position.

## Get VHF/UHF Relays

Get VHF/UHF Relays from DARC.de centered at latest reported position.

### Get camper sites

Get nearby camp sites from DARC.de. Work only in EU.

### **Get Server freqs**

Get list of server frequencies entered at the PSKmail wiki (server page)

### Get pskmail news

Get the latest pskmail news from the PSKmail wiki

### Get web pages

Open the web page window where a web page can be requested from the server.

### Identi.ca

Send and get status updates for the PSKmail channel on Identi.ca.

These updates will be sent to the PSKmail Identi.ca account so follow that to get the news.

## Link

Here is where to handle the link to servers:

• Ping	Send a ping frame on frequency	Ctrl-P
• Inquire	Send a ping to one specific server	Ctrl-I
Quality	Show signal quality table on main terminal	Ctrl-Q
• Link	Send a link request to the server	Ctrl-L
• Update	Update server with your mail data record	Ctrl-U
• Telnet	Start the telnet agent	Ctrl-T

host	verygoodserver.se
port	21
userid	sm0rwo
password	mysecret
Cancel	OK Connect Quit

Illustration 3: Telnet connection dialogue

## Help

Opens the interactive help which will be created from this manual and also displays license information about the application.


## **Mapping application**

APRS information is mostly geographical by nature. Most often we transfer our position and while doing so others can and will receive that data. During a connected session we may ask about stations in the vicinity and the server will return a long list of stations with position attached.

The geographical data can be very useful as text but even more so when displayed on top of a nice map. JPSKmail includes a server socket that many APRS clients can be very easily connected to.

The APRS server is enabled within options, please have a look at the chapter here that deals with the devices tab. Just set that to enabled and select a port to use (or use the default 8063 which should be fine in most cases).

Beneath is an image where xastir, <u>http://www.xastir.org/</u>, is connected to jPSKmail running on the same computer. The procedure is simple, just ask xastir to connect to an internet server located on localhost at the port set within options (default is 8063).

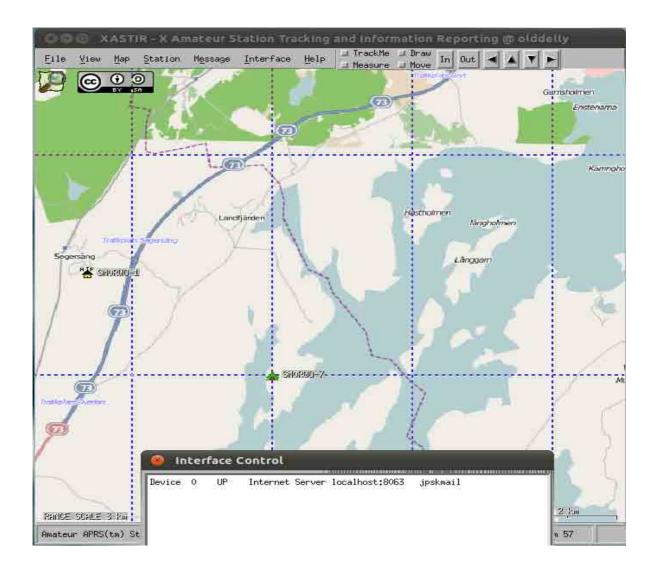

## How to get weather information through PSKmail

This section is mostly intended for sailors but can of course be useful also for other purposes and situations. I am mostly writing as a sailor as that is the situation familiar to me.

There are multiple ways to get weather information, there are also multiple ways of using this information and the intention here is to briefly talk about all of this. In no way is this the complete resource on how to do this as that would require several books or years of study.

The three main ways to get weather data at the moment is as clear human readable text (i.e. the weather report or forecast), IAC Fleet codes and grib files. The latter two are intended for use with a viewing tool.

There are also other possibilities, weather fax stations are available on the hf bands and a server sysop can set up a job that makes sure the latest report, forecast or image is available at the server all the time (contact the system operator for special needs).

### Weather reports, the human readable kind

The main ways of getting these reports and forecasts are three:

- 1. Get a web page containing the necessary weather data
- 2. Download a file from the servers file area
- 3. Listen to a broadcast from a server

### Fetch a web page

Getting a weather forecast from a web page involves a few steps. The first step is finding a reliable source web page to get data from. There are of course numerous sources for these and the PSK mail wiki is a good place to list the ones that work now. Here I will use BBC as an example, for instance the url: <u>http://news.bbc.co.uk/weather/coast\_and\_sea/shipping\_forecast/#area-4</u>

As PSKmail is not a broadband connection to the internet its a good idea to limit the amount of data requested and just get the necessary text. By browsing this web page its easy to see that we can cut away things before and after the area we are looking for, for instance we can start getting the page from "general synopsis" and end at "Cromarty". This way we can get just the part we are interested in. The web page request window can be prepared like the image below.

	Get URL	from	to
JPL 1	http://news.bbc.co.uk/weather/coast_and_sea/	The general synops	Cromarty
IPI-2	1		
IRL 1			
URL 4	1	( )	
IRL 5	[]		ii
JRE 6	1	()	1

When the web page bookmark has been prepared we are ready to connect to a server and push that button to request the page. When the server returns the requested page it will look like the example image below:

File Mode Preferences Mbox Info Identi.ca Link Help						
Connect	Abort	cq	Pos.	Send		
Low just west same time Viking * Wind Nort	t Scotland of Rockall becoming Moderate, fair.	1032 expected 1018 expected variable 3 on	ed 150 miles east	midnight tonight. of Iceland 1011 by		
Terminal Email	Files APR	5 Modem Ig	jate Rigetl			

So, in summary what is needed to request a web page fetch of the weather forecast is:

- 1. Find a web page with a suitable weather forecast (look to the wiki for suggestions)
- 2. Prepare the web page request bookmark
- 3. Connect to a server and
- 4. During the connected session push the web page button and request the weather page.

Also, the email compression selector will affect the way web pages are fetched. If compression is enabled then the web page will be asked for in a zipped format (TGETZIP) and if not in clear text.

### Download a file from the servers file area

Servers are connected to the internet and can fetch weather data periodically. This means that forecasts, warnings and even images etc. can be available on the server ready for download to the client. The server file area can be accessed during a connected session with a server. Connect to the server and select the **Files** tab. To see what files are available on the server just click on the List button. The server will respond with the current list of files, like the image below:

kueste 2011-04-27 10:08 2368 METAREA_I_HIGH_SEAS_FORECAST 2011-04-27 11:07 6366 METAREA_I_OFF_SHORE_FORECAST 2011-04-27 11:07 2895 METAREA_I_WARNING 2011-04-27 11:07 294 MMost 2011-04-27 10:08 2368 MMwest 2011-04-27 10:08 2368 navtex-dutch 2011-04-27 10:08 2368 navtex-rostock 2011-04-27 10:08 2368 nordostsee 2011-04-27 10:08 2368 nyheter 2011-04-27 11:06 5216 pings.log 2011-04-27 11:06 1255 SM-wx 2011-04-27 10:08 4209 Stationsmeldungen 2011-04-27 10:08 2368	1
	METAREA I_HIGH_SEAS_FORECAST_2011-04-27 11:07 6366 METAREA_I_OFF_SHORE_FORECAST_2011-04-27 11:07 2895 METAREA_I_WARNING_2011-04-27 11:07 294 MMost_2011-04-27 10:08 2368 MMwest_2011-04-27 10:08 2368 navtex-dutch_2011-04-27 10:08 1657 navtex-emden_2011-04-27 10:08 2368 navtex-rostock_2011-04-27 10:08 2368 nordostsee_2011-04-27 10:08 2368 nyheter_2011-04-27 11:06 5216 pings_log_2011-04-27 11:06 1255

Files are listed with filename, date when it was last fetched and size in bytes.

The size part is important, get the bigger files when the connection is good.

To get one of the files just click on it to select it and then use the Download button located just above the text control. The client will then request the file from the server.

The available files and content will vary with the servers but some files will probably be available everywhere. Some of those include METAREA\_I\_WARNING,

METAREA\_I\_HIGH\_SEAS\_FORECAST and METAREA\_I\_OFF\_SHORE\_FORECAST and these originate from the World Meteorological Organization, these and similar for other areas can be seen at <u>http://weather.gmdss.org</u>

Below is an image of what the warning file looked like when writing this chapter.


METAREA\_I\_WARNING - Wed Apr 27 10:07:06 UTC 2011 WONT54 EGRR 270800 SECURITE STORM WARNING AT 270000UTC, LOW 60 NORTH 56 WEST 984, EXPECTED 57 NORTH 42 WEST 993 BY 280000UTC. WINDS ARE EXPECTED TO REACH STORM FORCE 10 IN THE FAR SOUTHWEST OF WEST NORTHERN SECTION FROM 280300UTC

## Getting IAC Fleetcode data

WMO FM 46, or IAC Fleet, are weather standard codes maintained by the World Meteorological Organization. These codes are designed for extreme brevity with mechanical typewriters or telegraphy operators in mind. The standard code is also very good in that its not a standard unique to only one country, language barriers can be overcome by using this common reporting standard.

These codes are indeed very compressed, the image further below came from a file with a size of only 3 kB. The codes themselves are sent as five number code groups and look like "66450 57368 56367 54375 51388 49416 47448 46505..."

As can be seen above these codes are not easily read and to view them it is possible to plot and draw by hand but tools are available that do this. The image below is where this data is presented within the **zyGrib** software (which is free and available for multiple platforms).

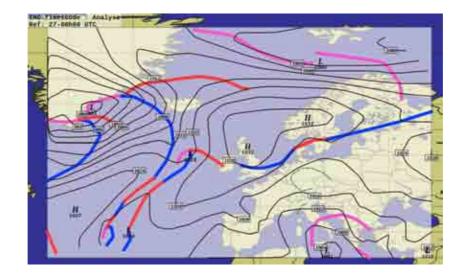

To get an updated IAC fleetcode file just connect to a server.

Locate the menu option "Get IAC Fleetcodes" within the **Info** menu and use it. That will have the server download a fleetcode file to your client.

When done just close the connection and open the IAC fleetcode text file using an appropriate viewer (zyGrib for instance). The file is located within ~/.pskmail/Downloads. For users of other operating systems that "~" means the users home folder. On windows that could be something like: <u>c:\documents</u>andsettings\users\per\pskmail\Downloads. Main thing is that its stored in your home folder.

Its also possible for the servers to broadcast this file on a regular basis, that way it will effortlessly just be there on the client without the need for a connect. How, when and perhaps even if the servers should broadcast is being discussed and investigated at the moment so this will have to be updated later. Broadcasts could be done at a different frequency, to minimize QRM to the APRS channel.

## Getting grib files

Grib file (Gridded Information in Binary) are files used to store forecast information by National weather/meteorology Services. These files contain much more than the IAC Fleetcodes and so the files can be much, much bigger. But, they are also by most considered very valuable as they contain weather information (wind direction and speed) directly usable for navigation. Many electronic chart display systems can import these files and use them together with boat data to optimize the actual boat route.

What you have to do to get them is the following:

\* connect to a server

\* once connected go to the Info menu and hit 'Get Grib File'

The client will send an email to <u>query@saildocs.com</u> requesting the data, centered on your position +- 5 degrees. For that the server needs to know your return address (send your mail record to the server if that has not been done) The grib file is delivered to your internet mailbox immediately.

\* While still connected, hit the QTC button on the client (return email address has to be correct)

- \* The mail headers will be downloaded
- \* Click on the header containing your grib file
- \* The server now sends the grib file to your client (using ARQ, so no errors)
- \* When download is ready you can view the attachment with zyGrib.

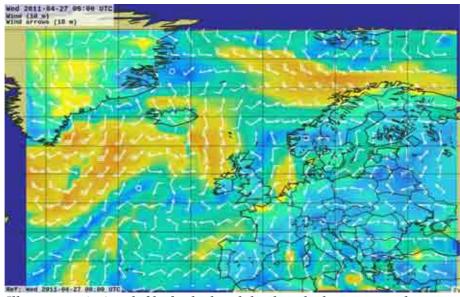


Illustration 4: A grib file fetched and displayed when writing this manual

So summing it up:

Connect the server, request the grib file, download the grib file and view the grib file with zyGrib or another viewer for grib files. The attached file will be placed within the Files folder within the pskmail directory (~/.pskmail/Files on linux).

## Appendix A, Mode selection

This table tries to gather data about the data modes that are usable with pskmail. Its important to note that this is an attempt and a work in progress, test results and data that can be used to enhance this table is most welcome!

Anyway, a few facts and conclusions can be drawn from this table:

-The fastest mode is PSK500, live tests have shown speeds of 1862 char/min with ARQ.

-The fastest mode for US hams on HF is PSK250

-The slowest mode here is THOR 8 at 28 wpm

-The most narrow mode is PSK63, 63 Hz wide

								Choice	e (1-3) fo	r	]
	Baud	Speed wpm	Speed wpm	Speed*	Bandw.	SNR		Weak	High	Flutter,	
Mode	rate	capital letters	small letters	bps	(hz)	at least	NVIS	signals	Speed	fading	Description and use
PSK63	63	74	102	88	63	-2	3	3	3	3	Vy narrow bt also vy slow
PSK125	125	148	204	176	125	-1	3	3	3	3	Better
PSK250	250	296	408	352	250	-1	3	3	2	3	Good all round mode
PSK500	500	592	816	704	500	2	3	3	1	3	Very fast, best 4 good condx
PSKR125	125	74	102	88	125	-8	2	2	3	2	
PSKR250	250	148	204	176	250	-5	2	2	2	3	
PSKR500	500	296	408	352	500	-3	2	3	1	3	Best allround mode?
MFSK16	15,6	58	58	58	316	-8	1	1	3	1	
MFSK32	31,25	120	120	120	630	-6	1	1	2	1	
Dominoex 11	10.8	70	70	70	262	-7	3	2	3	3	fldigi implementation flawed?
Dominoex 16	15.6	100	100	100	355	-6	3	2	3	3	fldigi implementation flawed?
Dominoex 22	21.5	140	140	140	524	-5	3	2	2	3	fldigi implementation flawed?
THOR8	7.8	28	28	28	346	-6	1	1	3	2	
THOR11	10.7	40	40	40	262	-5	1	X	3	2	
THOR16	15.6	58	58	58	355		1	Х	3	2	
THOR22	21.5	78	78	78	524		1	Х	2	2	

\* Speed is an attempt. Varicode and different ways to measure makes this difficult

\*\* SNR is whatever I could find, most at 3 Khz bandwidth..

You may notice that certain popular modes are missing from this table. Two of the missing modes are Olivia and MT63. Olivia is not usable with pskmail as it doesn't support the full 8-bit character set, that means the <SOH> frame start and <EOT> frame end cannot be transferred.

### Mode tables for adaptive asymmetric link control

As from jPSK mail version 0.5, separate adaptive mode control for up- and downlink modes is automatic.

To accomplish this a number of changes to server and client were necessary. John, VK2ETA has played an important role herein. Based on empirical data, two mode tables were put into the server, one for use by US hams and one for the rest of the world. This was necessary because the FCC will not allow symbol rates > 300 Bd. And PSK500 and PSK500R use 500 Bd.

Both tables incorporate the most popular modes, covering a large range of speeds, sensitivities and robustness (qrm, doppler, multipath).

Mode table:

#### PSK500 - PSK500R - PSK250R - MFSK32 - THOR22 - MFSK16 - THOR8

The modes in these tables run from fast to slow, and become more robust and sensitive from right to left. The server knows the S/N ratio and the download success rate in the client, and chooses the modes which allow the best throughput for the present channel conditions. Initial tx and rx modes are set on the client prior to issuing a connect frame. This is (still) under operator control.

Before sending a frame the server decides if a mode change is possible (up) or necessary (down) based on the S/N ratios of both links and arq success history. In that case the server switches one position up or down in the table.

## **APRS Mode choice**

For the APRS functions the best mode is normally the default channel mode. In Europe this is PSK500R. US servers will use PSK250, unless they operate on MARS frequencies.

In case a station does not come through in the default mode it is possible to use a lower speed mode with RSID on. TX RSID can be switched on manually in fldigi. On receipt of a QSL from a server the client's TXID will automatically be switched off again. This to prevent mode chaos on the frequency...

## Squelch Control

The squelch in fldigi is controlled by the jPSKmail client. The squelch level is automatically set to match the operation mode. If the squelch is switched off inadvertently, jPSKmail will automatically switch it back on. Without squelch operation the DCD function does not work, and the client cannot send beacons if the squelch is open...

# Appendix B:

## PSKmail ARQ protocol specification (2nd draft)

## Introduction

PSKmail is an ARQ data transmission system. It has been optimized for use on short wave (HF) radio frequencies. PSKmail has both a client/server architecture and a client/client architecture. The servers are gateways to diverse services on the internet. The clients enable mobile or portable radio stations to access the internet where there is no other coverage, or send messages and files to each other.

To use PSKmail, one uses a short wave radio and a PC with a sound card, and often a hardware interface between the radio and the PC. The communications protocol has been optimized for the specific conditions on short wave:

- Varying propagation conditions on short wave, with multi-path, doppler effects, and often weak signals near the noise floor.
- Often the mobile stations run low power and compromise antennas.
- As ham radio uses shared frequencies, interference levels are high.

To cater for this wide range of conditions, PSKmail does not use a single digital radio mode. Instead it uses a range of modes with **separate adaptive control on up- and download channels**. The maximum bandwidth of the HF system is 500 Hz, and speeds range from 44 CPS for ideal channels down to 2 CPS for the most problematic ones. For clean (single hop) channels PSK modes are used, for fuzzy channels MFSK and THOR modes are employed, including convolutional coding, Viterbi decoders, and interleavers to counteract static noise...

### Radio interface

The radio is always used in USB mode, as several of the modes used are polarized. THOR modes, e.g., are derived from DominoEx. Often a hardware interface is needed between modem and radio, to provide galvanic isolation for audio signals and PTT signal. *The protocol timing also allows the use of VOX.* 

### Modem interface

PSKmail uses Fldigi (>= 3.20) as a modem, which is a multi-mode digital modem program using the computer sound card. PSKmail uses ASCII characters 0x01 (<SOH>, 0x04 <EOT>, 0x06 <ACK>, 0x12 <DC2> and printable ASCII characters 32 ... 127 to talk to the modem.

The system uses **RSID signalling** to notify the link layer protocol engine of mode changes, and also makes signal/noise ratio data available to the application.

PTT signalling is generated by Fldigi.


The modem program is available for all operating systems.

## Link layer protocol

The PSKmail system uses a master/slave protocol. The server is the master, the client is the slave. In case two clients connect each other for a TTY (chat) session, the caller is the slave.

All control functions are in the master, which makes timing a lot easier than in the first PSKmail implementations, where client and server would compete until they were transmitting synchronously on top of each other.

## Status diagram

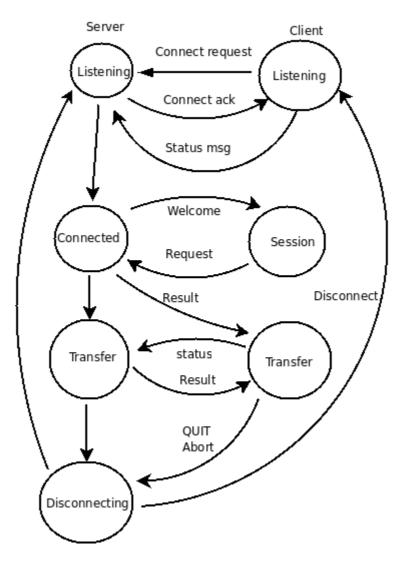

### **Protocol details**

All transactions between server and client are packed in **frames**. Every frame consists of maximum 10 **blocks**, viz. 0 ... 8 data blocks, 1 status block, and 1 optional identification block (at start of session and every 10 minutes thereafter).

### Frame structure:

### <SOH>[<ident block>]<data block>... <data block><status block><EOT>

All blocks have the same structure. They contain a header, a data partition, and a CRC16 number. The start of a block is marked with a  $\langle$ SOH $\rangle$  (ASCII 0x01) character. A status block ends with a  $\langle$ EOT $\rangle$  (ASCII 0x04) character. The data partition can be **0** ... **64 characters** long.

### **Block structure:**

or

```
<SOH><header><data><CRC>
```

### <SOH><header><data><CRC><EOT> (status block)

The **header** consists of 3 characters. The meaning of these characters is different for master (server) and slave (client), and also depending on block type. For the **client header:** 

Block type	Character 1	Character 2	Character 3
Status	Rx s/n [0x20 - 0x7A]	Session [0x20 - 0x5F]	S
Data	0	Session [0x20 - 0x5F]	Blocknr. [0x20 - 0x5F]
Connect	Protocol version [0,1]	0	с
Summon	Protocol version [0,1]	0	n
Abort	0	Session [0x20 - 0x5F]	a
Ident	0	Session [0x20 - 0x5F]	ii

### For the **server header:**

Block type	Character 1	Character 2	Character 3
Status	Next Txmode [0 -8]	Session [0x20 - 0x5F]	S
Data	0	Session [0x20 - 0x5F]	Blocknr. [0x20 - 0x5F]
Connect ack	Protocol version [0,1]	Session [0x20 - 0x5F]	k
Disconnect	0	Session [0x20 - 0x5F]	d
Ident	0	Session [0x20 - 0x5F]	ii

Some blocks have a **fixed data field**:

Block type	Data partition
Connect	PI4TUE:24 PA0R:1024 xyyyy (x = 0 - 8, initial server TX mode) (yyyy = mode table)
Connect ack	PA0R:1024 PI4TUE:24 x (x = block data length)
Summon	PI4TUE:24 PA0R:1024 10146000 x ( $x = 0 - 8$ , initial server TX mode)
Ident	PAOR de PI4TUE

## ARQ control and repeats

The receive buffer is a circular buffer with room for 64 blocks. The **status block data field** carries the **status of the receive buffer**:

Char 1	Char 2	Char 3	Chars 4-12
Last block sent this frame	Buffer o.k. until/incl. block x	Last good block received	Missing blocks
[0x20 - 0x5F]	[0x20 - 0x5F]	[0x20 - 0x5F]	0 -8 x [0x20 - 0x5F]

Missing blocks are repeated by adding them to the next frame.

## Adaptive mode control

The server controls both its own digital mode and that of the client.

The mode table covers a broad range of speeds and modes:

<b>PSK500</b>	PSK500R	PSK250R	MFSK32	THOR22	MFSK16	THOR8

For use in USA , where Baud rates over 300 Baud are not allowed on ham radio frequencies below 30 MHz, an alternative mode table is available:

PSK250 PSK250R PSK125R MFSK32 THOR22 MFSK16 THOR8

Both client and server measure S/N ratio of the frame received, and the client sends its SNR data to the server in every status block. The server signals mode changes to the client via RSID and through a flag in its status block header.

If a status block is not received, a poll frame is sent, which is just an empty frame without data blocks.

TX and RX modes are controlled in such a way that the number of ARQ repeats are limited, providing optimum throughput for the relative channel.

The server uses RSID on receive, so the client can connect in any of the available modes. Default listening mode is PSK500R, but the server can scan more sensitive modes for DX if necessary.

### Mode indicators for sending the Mode table to the server:

1	2	3	4	5	6	7	8	9	a	b	с	d
THOR	MFSK	THOR	MFSK	PSK	PSK	PSK	PSK	PSK	PSK	PSK	MFSK	THOR
8	16	22	32	250R	500R	500	250	125	63	125R	64	11

## **Squelch Control**

Squelch level is automatically adjusted to a proper value by the client, to match the relevant operating mode.

## **Compression techniques**

The PSKmail server uses **gzip** to compress web pages, emails and binary files. This zipped image is then **Base64** coded for transmission with the ASCII127 character set. Coding and decoding are automatic.

## Unproto (non-ARQ) operation

There are 4 PSKmail functions which use unproto frames. These functions are:

- Ping
- Inquire
- Link to server
- APRS Beaconing and Messaging

Like ARQ frames, unproto frames consist of a header, a data field and a CRC. When the client sends a **Ping or Inquire frame**, all servers answer with a **Ping reply frame**. The Ping reply frame contains a signal quality indication representing the RX signal quality in % at the server.

Ping frame	<soh>00uPA0R:7 ABCD<eot></eot></soh>
Inquire frame	<soh>00uPA0R:8 PI4TUE ABDD<eot></eot></soh>
Ping reply frame	<soh>PI4TUE:71 99 BCDA<eot></eot></soh>

Every PSKmail server has a **link table** containing client calls. A client can only be in the link table of 1 server. This function is used when the server sends an APRS message to a specific client. This way, the message is only sent by one server.

The client sends a link request to a specific server, and on receipt of the request the server acknowledges the request:

Link request	<soh>00uPA0R&gt;<pi4tue abcd<eot=""></pi4tue></soh>
Link acknowledge	<soh>00uPA0R&lt;&gt;PI4TUE ABCD<eot></eot></soh>

The server and the client can send a **beacon on HF**, containing its APRS position and a status message:

Server beacon:	<soh>00ulS0GRB-3:72 Pskmail_Server_0.9.34-10147.0KHz -DD6E<eot></eot></soh>
Client beacon	<soh>00ulK2YXT:26 !4507.95N/01044.65E-I1B80<eot></eot></soh>

When the server hears a client beacon or an APRS message, it confirms reception with a short **QSL message.** The QSL message contains a signal quality indication (%):

QSL message <SOH>QSL PAOR de PI4TUE 99 555F<EOT>

An **APRS message** has the same format as the client beacon, an **APRS email** starts with an <u>address@something.xxx</u>.

APRS	<soh>00uDJ0LN:26 PA0R This is the APRS message 1B80<eot></eot></soh>
message	
APRS email	<soh>00uDJ0LN:25 PA0R@ISP.ORG This is the email message 2A97<eot></eot></soh>

CQ	<soh>00uPA0R:27 CQ CQ CQ PSKmail 02B2<eot></eot></soh>
----	--

# **RSID** signalling

RSID (Reed Solomon Identification) is used for mode change signalling. Thereby the following rules are applied:

	TX RSID	RX RSID
Client Idle (APRS)	OFF	OFF (manual switch ON)
Client receives acknowledge	OFF	OFF
Client connect request	ON	ON
Client data transfer	OFF	ON
Server Idle (APRS)	OFF	ON
Server sends acknowledge	ON	ON
Server data transfer	OFF	OFF
Server changes mode	ON	OFF

References	
MFSK modes	http://www.qsl.net/zl1bpu/MFSK/
PSK modes	http://aintel.bi.ehu.es/psk31.html
Fldigi descriptions	http://www.w1hkj.com/FldigiHelp-3.12/Modes/psk.htm
	http://www.w1hkj.com/FldigiHelp-3.12/Modes/mfsk.htm
	http://www.w1hkj.com/FldigiHelp-3.12/Modes/thor.htm
Fldigi	http://www.w1hkj.com/beginners.html
PSKmail:	http://www.pskmail.org/
Mailing list:	http://www.freelists.org/archive/pskmail

REV.7 Authored by: Per Crusefalk & Rein Couperus, PAOR, 18-08-2011